

# ROADRELAY™ 5 Anti-theft Reference

## Locking the Engine

How the engine gets locked depends upon the "Anti-theft Mode"(Off, Manual, Semi-automatic, Automatic).

Key On to Arm  
Vehicle Security

To Arm  
Vehicle Security  
Enter Password

Vehicle Security  
Armed




Key On to Arm  
Vehicle Security

Arm  
Vehicle Security  
Yes

### Manual Mode

When the key is turned OFF, this screen will be displayed.

Turn the key ON.

Use the  or  key to enter the password. Use the  key to advance to the next character (Note: after depressing key for 2 seconds, the RoadRelay will "auto advance" to the next character position).



Use the  key to backspace.

If the password is correct, the engine is locked (Armed).

### Semi-Automatic Mode

When the key is turned OFF, this screen will be displayed.

Turn the key ON.

Press  to lock the vehicle. Press  to leave this screen and NOT lock the engine.

### Automatic Mode

In Automatic Mode, the engine automatically locks 30 seconds after the ignition key is turned OFF.

## Changing the Password

Enter Existing  
Password

Press , select , select , and select "Change Password". Use  or  to enter the existing Password.

Press  when finished.

Enter New  
Password

Once the existing password has been correctly entered, the new password can be entered.

Confirm Password

You must confirm the new password. If this fails, then the password is not changed.

**DO NOT FORGET YOUR PASSWORD!** When protected by the anti-theft feature, the engine will not start without entering the password. Do not write your password where it can be found by a thief. Keep it someplace safe where you can find it easily.



## Unlocking the Engine

Vehicle Security  
Armed  
Enter Password



If the engine is locked, then you must enter a six-number password. As the password is entered, each character is replace with an asterisk “\*”.

Use or to enter the existing Password.



Press when you have finished.

If the password is correct then this screen will be displayed and the engine is now unlocked.

Vehicle Security  
Disarmed

Password Incorrect

Enter Password



If the password is incorrect, this screen will be displayed.

Confirm Password



If you enter a correct password after an incorrect password, you must confirm the password by entering it again.

Password Incorrect  
Vehicle Secured

If you fail to enter the password correctly after five attempts, you will be locked out for 10 minutes and you will see this screen.

## Selecting the Anti-theft Mode

The Anti-theft feature has four modes of operations:

Mode	Description
Off	The anti-theft feature is off. Vehicle is NOT secured.
Manual	The driver locks the engine by entering a password.
Semi-Automatic	The driver locks the engine by selecting "Yes" when asked to "Arm Vehicle Security" at key-off.
Automatic	The engine is automatically locked 30 seconds after the ignition key is turned off.

Security Mode  
Automatic

Press , select , select , and select "Security Mode". Use or to select the mode you wish to use.

Enter Password



You will be prompt to enter the existing password. Use or to enter the existing Password.

Press when finished.

Confirm Password



If the engine is a Select Plus and the previous mode was "Off", the user must enter the new password again to confirm it.

Vehicle Security  
Change Failed

If the password entry fails, the mode is not changed and this screen is shown.

Note: Since Anti-theft works in conjunction with your Cummins engine, you must first visit a distributorship or certified dealership and request to have INSITE™ (Cummins authorized service tool) turn this feature ON and set the initial Anti-theft password. After this initial setup, you can use the RoadRelay™ keypad to make any further adjustments.